



JS1-H JOYSTICK

[83053706](#)

Model code: JS1H-XY-CPH-S-C33-TPP2-R-B1A-B1A-V1A-NNN-R1A-NNN-NNN-NNN-NNN-NNN-NNN-R1A-BRGN-NN

[Where to buy](#)

Product specifications

| Characteristic | Value | Description |
|------------------------------|-------|------------------------------|
| B: Operational axis | XY | XY: Bi-direct.: X and Y axis |
| C: Shaft pos. sensing output | CPH | CPH: CAN Open w. hall |
| D: Centering spring | S | S: Standard spring |
| E: CAN | C33 | C33: Node ID 33, 250Kbs |
| F1: Mounting | T | T: Top mounting/NBR BOOT |
| F2: Handle | PP2 | PP2: IP66 version of PR2 |
| G: Left- or right hand | R | R: Right hand grip |
| H1: Defining of front plate | B1A | B1A: Black K12 |
| H2: Defining of front plate | B1A | B1A: Black K12 |
| H3: Defining of front plate | V1A | V1A: Roller hall, 5mm |
| H4: Defining of front plate | NNN | NNN: No function |
| H5: Defining of front plate | R1A | R1A: Red K12 |
| H6: Defining of front/back | NNN | NNN: No function |
| H7: Defining of back side | NNN | NNN: No function |
| H8: Defining of back side | NNN | NNN: No function |
| H9: Def. of grip front side | NNN | NNN: No function |
| H10: Def. of grip front side | NNN | NNN: No function |
| H11: Def. of grip front side | NNN | NNN: No function |
| H12: Def. of grip side | R1A | R1A: Red K12 |
| J1: Grip color | B | B: Black grip & front |
| J2: Ring | R | R: Red colour band |



| Characteristic | Value | Description |
|-------------------------|-------|-------------------------------|
| J3: Connector | G | G: Cable for CAN P/H (1 plug) |
| J4: Kit and ext. Cable | N | N: No ext. Cable or ring |
| K: Software or settings | NN | NN: No software and settings |

General specifications

| Characteristic | Value |
|----------------|------------------------------|
| Proposition 65 | Cancer and Reproductive Harm |

For the most current information and other product assets, please use this link to visit the product page on Danfoss PowerSource [🔗](#)