

MVB10-IF



OPERATION

This connection interface does not include any active components and may be used to connect MVB10 modules with PVG32/16 modules.

Before combining MVB10 sections with products from the Danfoss PVG product families, carefully read and consider the relevant operating instructions provided by Danfoss. Lack of compliance with said instructions may result into failures, also of dangerous kind."

PVG Interface module



