




When the multicoupling chosen has one or more holes where no couplings or electrical connectors are fitted, it is important to cover the holes with the proper plugs in order to avoid dirt entering the multicoupling. The plugs for multicouplings holes are made in black anodized aluminum.

Installation

- Put the plug in the corresponding hole of mobile or fixed multiconnection.
- Assemble the seeger ring with proper pliers.
- Check the correct positioning of the seeger ring after assembly.
- To disassemble: same as above but reverse process.

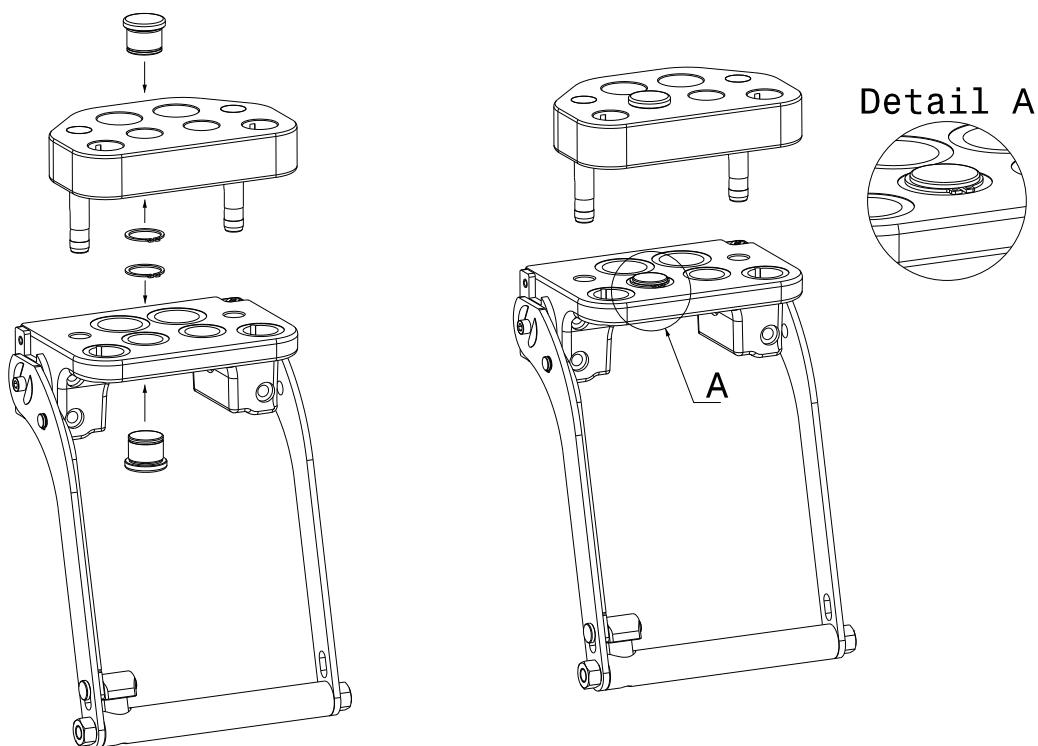

PLUGS

| Plugs | |
|-----------|---|
| Body Size | Description |
| 815701030 | SET OF 5 PLUGS FOR HOLE MULTI FIX FAP9HP |
| 815701031 | SET OF 5 PLUGS FOR HOLE MULTI MOBILE FAP9HP |
| 815701018 | SET OF 10 PLUGS FOR HOLE MULTI FIX FAP-FAQ9 |
| 815701020 | SET OF 10 PLUGS FOR HOLE MULTI MOBILE FAP-FAQ9 |
| 815701022 | SET OF 10 PLUGS FOR HOLE MULTI FIX FAP-FAQ13 |
| 815701023 | SET OF 10 PLUGS FOR HOLE MULTI MOBILE FAP-FAQ13 |
| 815701024 | SET OF 5 PLUGS FOR HOLE MULTI FIX FAP-FAQ15 |
| 815701025 | SET OF 5 PLUGS FOR HOLE MULTI MOBILE FAP-FAQ15 |
| 815701026 | SET OF 5 PLUGS FOR HOLE MULTI FIX FAP-FAQ17 |
| 815701027 | SET OF 5 PLUGS FOR HOLE MULTI MOBILE FAP-FAQ17 |
| 815701028 | SET OF 5 PLUGS FOR HOLE MULTI FIX FAP-FAQ21 |
| 815701029 | SET OF 5 PLUGS FOR HOLE MULTI MOBILE FAP-FAQ21 |

Kit composed of only plugs, to fix in the plate you need also seeger ring (see table here below)

SEEGER RING

| Seeger ring | |
|-------------|-------------------------------------|
| Body Size | Description |
| 815701033 | SET OF 10 SEEGER FOR PLUG FAP-FAQ9 |
| 815701034 | SET OF 10 SEEGER FOR PLUG FAP-FAQ13 |
| 815701035 | SET OF 5 SEEGER FOR PLUG FAP-FAQ15 |
| 815701036 | SET OF 5 SEEGER FOR PLUG FAP-FAQ17 |
| 815701037 | SET OF 5 SEEGER FOR PLUG FAP-FAQ21 |
| 815701038 | SET OF 5 SEEGER FOR PLUG FAP9HP |



WARNING

Pay attention not to damage the seeger ring during the assembly.
 Do not leave any open hole (without plug) in the multiconnection in order to avoid dirt to enter in the parts.
 Do not disassemble, misuse, modify or damage the products.