




Innesti rapidi - Quick-release couplings
Schnellkupplungen - Coupleurs rapides
FASTER S.p.A.

RMOLTA D'ADDA CR Italy - ☎ (39) 0363 377211 - Fax (39) 0363 377333

ISTRUZ.N 35 mod. A3

I	SOSTITUZIONE VITI MULTIFASTER	KIT VP116 - VP124
GB	MULTIFASTER SCREWS REPLACEMENT	VP4 - VP8

MOD. 699 250

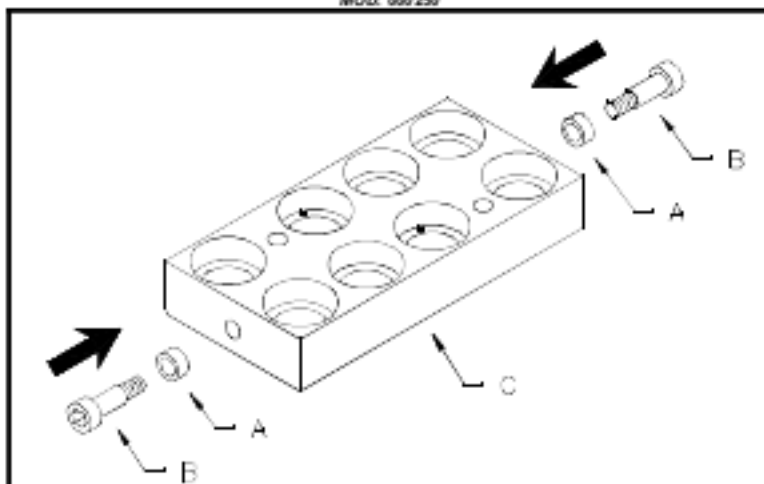

I	1 INFILARE I RULLINI "A" SULLE VITI "B"	GB	1 ASSEMBLE THE ROLLERS "A" ON THE SCREWS "B"
	2 AVVITARE LE VITI "B" NEGLI APPOSITI FORI SULLA PIASTRA "C"		2 INSERT THE SCREWS "B" INTO THE PROPER HOLES ON THE PLATE "C"
	3 VERIFICARE CHE I RULLINI "A" SIANO LIBERI DI RUOTARE		3 MAKE SURE ROLLERS "A" ARE FREE TO ROTATE