


Assembly FS



Place the FSR ring into the fitting as shown below. Tighten the nut by hand and further with a suitable spanner for appr. 120 ° / 2 flats. A significant increase of force shows the end of assembly.

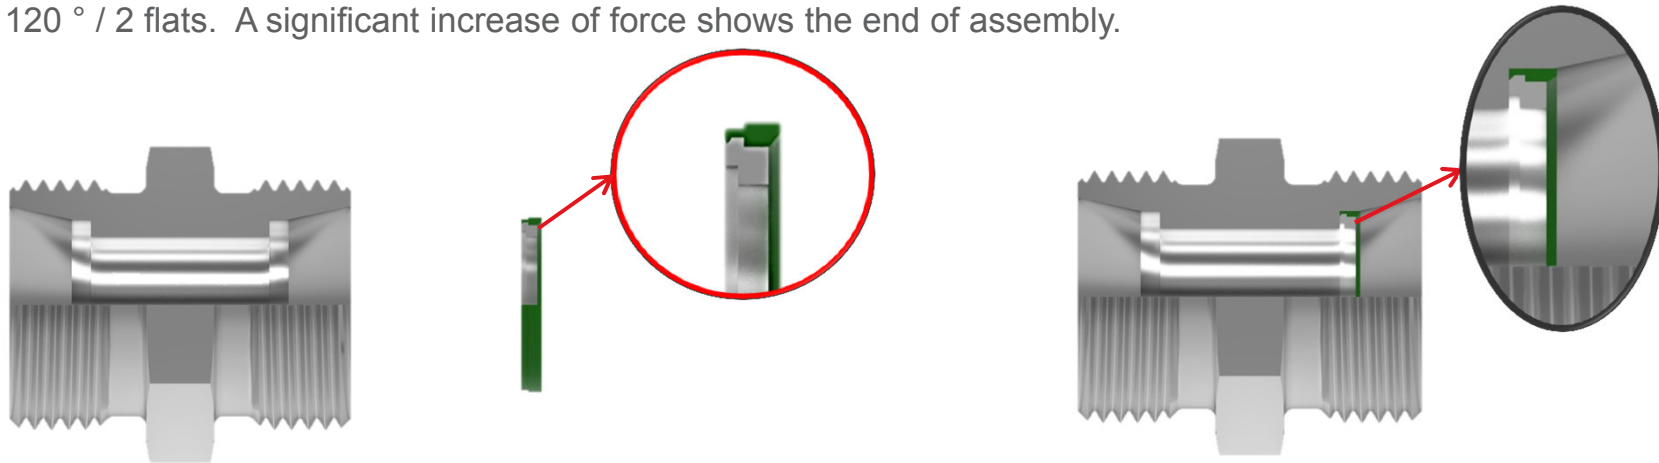

Place the FSSR ring onto the cylindrical end of tube. Tighten the nut by hand and further with a suitable spanner for appr. 120 ° / 2 Flats. A significant increase of force shows the end of assembly.

