

# Joystick Prof 1, PVRE and PVRET

# Technical Information












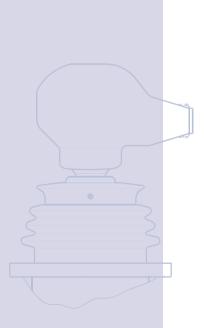





## Joystick Prof 1, PVRE and PVRET

## Contents

## **Revision History**

#### Table of Revisions

Date	Page	Changed	Rev
Mar 2008	All	First edition	AA
Apr 2010	36	Japan location	AB
Jun 2010	14	Drawing adjusted	AC

#### **Contents**

General	3
Application	3
Mechanical design	3
Main function module	
Connector	2
Direction switches	5
Neutral position switch	5
Cables	5
Prof joysticks	6
Prof 1	
Colour band	8
Proportional modules	
Push buttons	8
Location and orientation of modules	9
Electronic modules	9
connections – basic version	13
connections – standard, extended versions	14
Technical data	15
Dimensions	16
Examples of use	17
Standard programme	19
Selection overview	20
STANDARD PROGRAMME DETAILS	22
Prof 1 Joystick specification	23
PVRE series 2	24
Versions	24
Location and orientation of functions	25
Connections	26
Technical data	27
Dimensions	28
Examples of use	29
PVRET series 2	30
Version	30

## © 2010 Sauer-Danfoss. All rights reserved.

Sauer-Danfoss accepts no responsibility for possible errors in catalogs, brochures and other printed material. Sauer -Danfoss reserves the right to alter its products without prior notice. This also applies to products already ordered provided that such alterations can be made without affecting agreed specifications. All trademarks in this material are properties of their respective owners. Sauer-Danfoss, the Sauer-Danfoss logotype, the Sauer-Danfoss S-icon, PLUS+1™, What really matters is inside® and Know-How in Motion™ are trademarks of the Sauer-Danfoss Group. Frontpage: F300 746, F300 747, F300 748, F300 749, Drawing 162B96



## General

## **Application**



F300 749

PVRE, PVRET and Prof joysticks from Sauer-Danfoss are generally used together with PVGs and PVEs, but can be used in any application. A complete range of joysticks from the simple PVRE handle with X-Y functions to the Prof 1 ergonomic handle with rollers and pushbuttons are available.

## **Mechanical Design**

All handle variants share the same mechanical base to which the electronics are mounted. The mounting flange of the joystick is an integrated part of the mechanical base, which also contains a linkage that transfers handle movement to the electronics. The linkage also includes neutral positioning springs.

The neutral positioning springs are designed to ensure a smooth return of the handle into neutral position. The maximum spring force is optimised to be just strong enough to keep the handle in position, even during operation in rough terrain, without interfering with the operation of the joystick or impairing it's ergonomic characteristics.

Spring force	8-10 N
Spring loice	0 10 10



## General

#### **Main Function Module**

(Prop1 and Prop2)


The primary functions of the joystick are defined as its X and Y directions.

Main functions are potentiometers with integrated direction switches.

Each function has a working angle of  $\pm 18^{\circ}$ .


Signal range	Neutral signal		
25% – 75%	50%		
of supply voltage			

Note: When moving the handle diagonally the maximum signal range is not available.

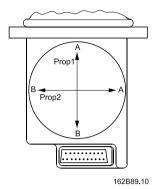

## Connector

All joysticks come with a common **25 pin male SUB-D connector** with M3 screws. (MIL - DTL - 24308)

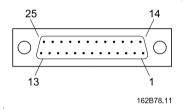



## General


#### **Direction Switches**

Proportional modules have integrated direction switches. One switch is activated when the module is moved in the A direction, the other is activated when the module is moved in the B direction.

The direction switches are used to activate the neutral position switch, and with some electronic modules the direction switch outputs are available in the connector. (See details about electronics.)

There is a dead band in the joystick of approximately 1.5° before the direction switches are activated.

Note: The direction switches are independent from the signal voltage

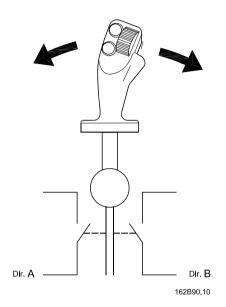

#### **Neutral Position Switch**

The neutral position switch can supply up to 3 PVEs or other devices (see electrical details), and functions as both a power save and a safety switch.

The switch is only activated when one or more of the proportional modules are activated.

The operation of the neutral position switch is dependant on signals from the direction switches.


Sauer-Danfoss recommends that the neutral position switch be used to the greatest possible extent.

Note: When using the neutral position switch all three  $U_{DC}$  wires as well as all three Neutral Switch wires **must** be connected.

#### **Cables**

For compatibility with different applications, a selection of mating cables are available:

Code no. 162B		Length mm [in]	Plug type	Туре
6013		4000 [157]	Leads	Vertical SUB-D
6014		4000 [157]	Leads	Horizontal Sub-D
6015		500 [19]	Clipper	-
6016		230 [9]	TrimTrio	-
	6017	230 [9]	Tabs	PVRE compatibility

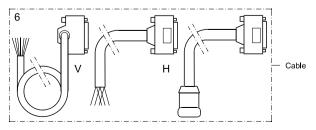

162B93.10 .10



## **Prof Joysticks**

## **Prof Joysticks**


The Prof family of joysticks is built around a series of modules that can be combined in various ways to create the joystick that best fits the application.

Each joystick has a base module with proportional functions (X & Y); a colour band for

decoration and identity, a handle, and depending on handle selection, a number of pushbuttons and/or proportional functions.

## **Handle / Top functions**

To provide optimum user comfort, a selection of handles is available. Each handle offers a choice of push buttons and / or proportional functions positioned for ease of use and comfort.

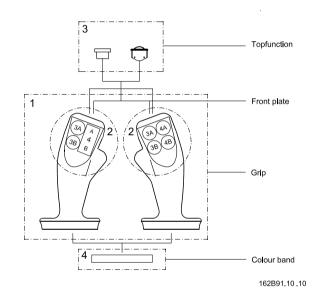




**Prof Joysticks** 

## **Prof Joysticks**


### **Base module**

A number of electronic modules provide various performance levels to cater for different needs in different applications.

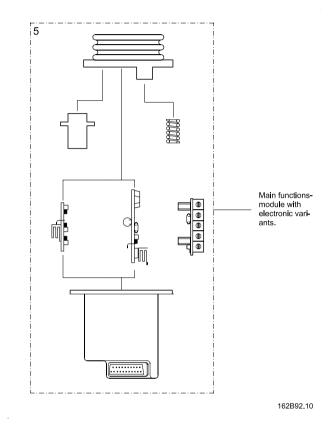

### **Cable**

For easy integration into existing applications cables with different connectors are available as accessories, see page 5.

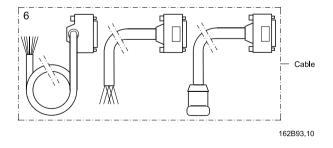

**520L0541** • Rev AC • Jun 2010



Prof 1

#### Prof 1

A professional handle for intensive operation; with a forward-leaning, curved, ergonomic shape. The leather-like grained surface allows the palm of the hand to breathe during operation.

The Prof 1 handle can be fitted with up to seven push buttons, or up to two proportional functions with up to five push buttons.

For location and combination of function modules see the overview.



A choice of colors is available for the band at the base of the handle.

Colors			
Yellow			
Black			
Red			





## **Proportional Modules**

The roller function module is a spring centred potentiometer with integrated direction switches.

Working angle: ±42°

Direction switch angle: 3.5 ±2°


Signal range	Neutral signal		
25% – 75%	50%		
of supply voltage			



The handle can be fitted with up to seven independent On/Off functions.

The buttons are protected against shocks and unintentional activation by a high collar.

Colors
Yellow
Black
Red
Grey

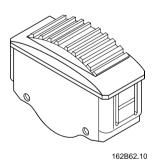


162B08.10





## **Location and Orientation** of Modules

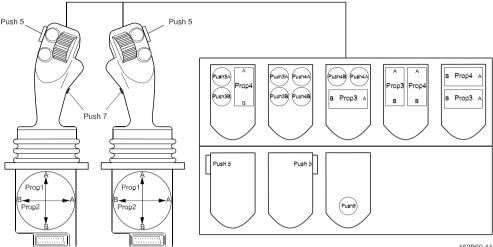

162B69.11

### **Electronic Modules**

The electronic modules are available with four different performance levels: Basic, Standard, Extended, and CAN-enabled.

#### **Basic**

The Basic level module is a connection platform that contains no electronics. This version offers raw signals from function modules, proportional modules, and push buttons.

The Basic level module contains no kind of protection, amplification, neutral switches, relays, or filtering and meets no legal specifications. The proportional functions in the basic module are configured like this:



The value of P is 5 K $\Omega$ , R1 and R2 are 1.125 K $\Omega$  (See technical data for tolerances). This configuration ensures that the output signal will be at least 25%-75% of the supply voltage.

Note: Because of the output impedance of the sensors, it is recommended to use an amplifier if the application draws more than 15  $\mu$ A.



Prof 1

#### **Electronic Modules**


#### **Standard**


The Standard level electronic module provides amplifiers, inverting and signal relays on all proportional outputs, and an electronic switch on all On/Off outputs.

The signal relays are controlled by the power supply in such a way that a power failure will disconnect the output. (This will automatically send a Sauer-Danfoss proportional valve to neutral position)

When used together with a Sauer-Danfoss proportional valve signal inversion causes the joystick to move the spool in the direction opposite to the default. This is equivalent to swapping the hoses on the valve outlets.

Note: The directional switches are not affected by the signal inversion.

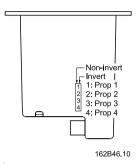

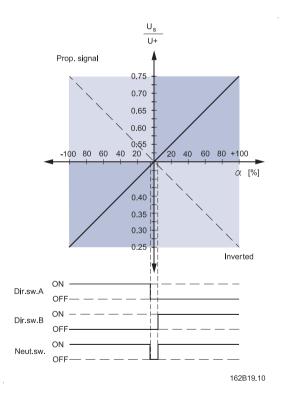

Factory setting: Non-inverted




Prof 1

#### **Electronic Modules**

#### **Extended**

The Extended level electronic module has the same configuration as the Standard level module. Additionally it has adjustable proportional functions. The Extended level module offers the option of individual signal adaptation (flow adjustment) and common dead-band compensation.

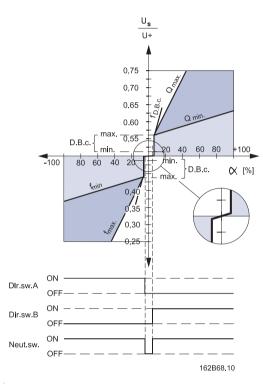

The dead band compensation (D.B.c.) ensures that the dead band of the valve is reduced to a minimum movement of the grip.

The dead band compensation is only active outside the neutral range, which ensures normal amplification within the neutral position range.

The dead band compensation is set for all four proportional functions on one potentiometer.


For each proportional function there are two integrated potentiometers that independently control the gain for the A and B directions of the signal output without limiting the movement range of the handle (adjustable flow range).

The gain of each function can be adjusted from 0.25 to 2.00. This has no effect within the D.B.c. range.



### **Electronic Modules**

Location of potentiometers for adjusting D.B.c and gain:

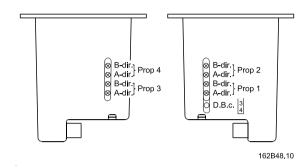

Factory setting @ 12 V		
Dead band compensation	0.42 V	
Signal gain	0.86	


## **CAN-enabled**

There is a CAN-enabled electronic module available for the Prof family of joysticks. The module provides a standard CANOpen interface. For further information read Sauer-Danfoss Technote on CAN bus components and see our webpage: http://www.sauer-danfoss.com



Prof 1

## Connections - Basic

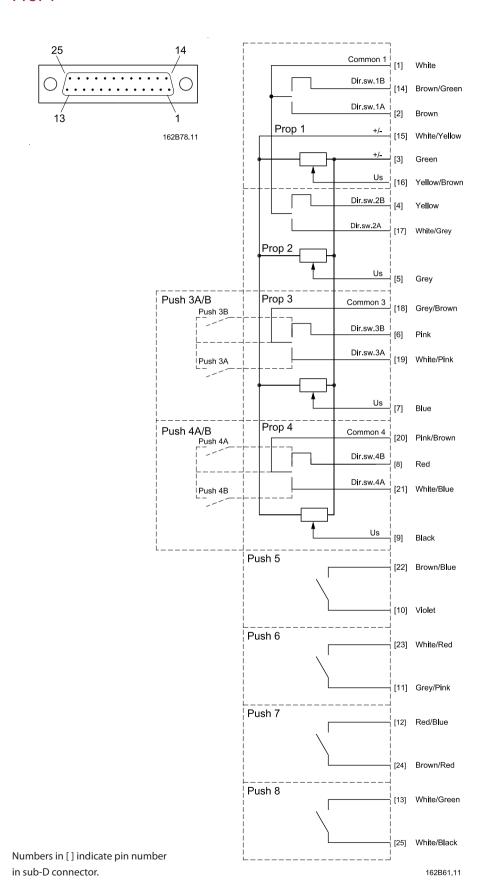





## Prof 1

## Connections - Standard - Extended

{N} (13) Violet
Green
{U} (18) White/Yellow
Brown/Yellow

{M} (12) Brown/Blue

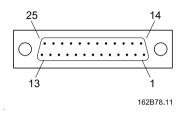

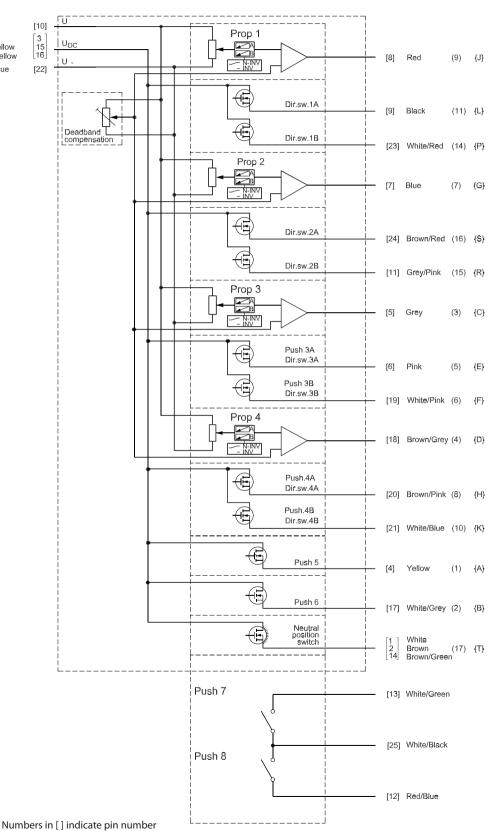

in sub-D connector.

162B59.12



# Joystick Prof 1, PVRE and PVRET

Prof 1

## **Technical Data**

## All

	Below flange	IP 21
Enclosure	Above flange IP 50	
Ambient temperature		-30 - +60° [-22 - +140°F]
Max. force on handle	-	1000 N static

## **Basic**

Supply voltages		U+	≤30 V
Duamantianal functions	R1	Р	5 KΩ ±50%
Proportional functions	R2	R1 & R2	P × 0.225 ±1%
Max signal current			15 μA (1 mA peak)
Max direction switch load for all propo	ax direction switch load for all proportional functions		30 V <sub>DC</sub> / 2mA
Nax push button load			30 V <sub>DC</sub> / 50mA

Note: There are no electronics built in to the Basic level module.

## **Standard and Extended**

upply voltages		$U_{DC_{r}}U_{+}$	10-30 V	
		Max ripple	5%	
Current consumption			≈150 mA	
   Signal voltage U <sub>s</sub>	$U_s$	$Min \rightarrow Max$	$0.25 \rightarrow 0.75$	
ignal voltage o <sub>s</sub>		Neutral position	0.50	
Signal load in neutral position		Load type	PVE	Other
Signal load in neutral position		Load impedance	>6 kΩ	>15 kΩ
Signal current at max movement	gnal current at max movement		$\begin{array}{c} \text{U}_{\text{s}}  0.5 \times \text{U}_{+} \\ \text{6 k}\Omega \\ \pm 0.6 \text{ mA} \end{array}$	$U_s$ 15 k $\Omega$ 0.2 $\rightarrow$ 0.6 mA
		@ U <sub>DC</sub> = 24 V	± 1.2 mA	$0.4 \rightarrow 1.2 \text{ mA}$
Signal current in neutral position		$@ U_{DC} = 12 V$	± 0 mA	0.4 mA
		$@ U_{DC} = 24 V$	± 0 mA	0.8 mA
			Output signal = U <sub>s</sub>	
Inverter		Inverted	Output signal = $-1 \times (U_s - 0.5 \times U_+) + 0.5 \times U_+$	
Push buttons and directions switches for all proportional functions		Max load	0.6 A	
Push 7 & Push 8		Max load	30 V <sub>DC</sub> / 50 mA	
Neutral position switch		Max load	3 A	

## **Extended only**


Cimpal na mulation II	U <sub>s</sub>	Min (50%)	$0.37 \rightarrow 0.63$ at 100% movement
Signal regulation U <sub>s</sub>	$U_+$	Max (200%)	$0.25 \rightarrow 0.75$ at 50% movement
Dood bond componentian		Min	0.00
Dead band compensation	$U_+$	Max	0.06



# Joystick Prof 1, PVRE and PVRET

Prof 1

## **Dimensions**

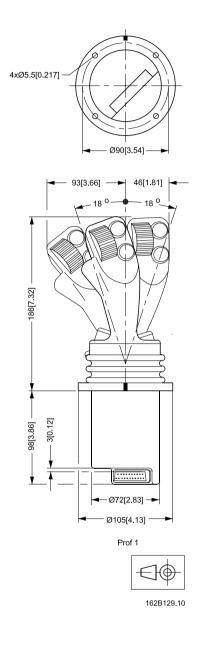




Prof 1

## **Examples of Use**

Signal leads must not also function as supply leads unless the distance between PVE and terminal board is less than 3 m [120 in] and the lead cross-

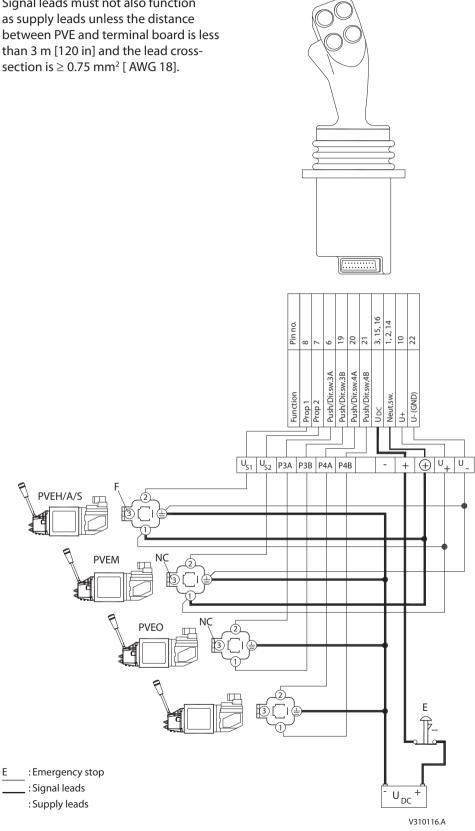




## **SAUER**Joystick Prof 1, PVRE at Technical Information Joystick Prof 1, PVRE and PVRET

Prof 1

## **Examples of Use**

## **Basic version used with controller**

When using the Basic level module with a controller, it is recommend to use a filter similar to the one in the figure below to ensure a symmetric and limited load on the proportional sensors.

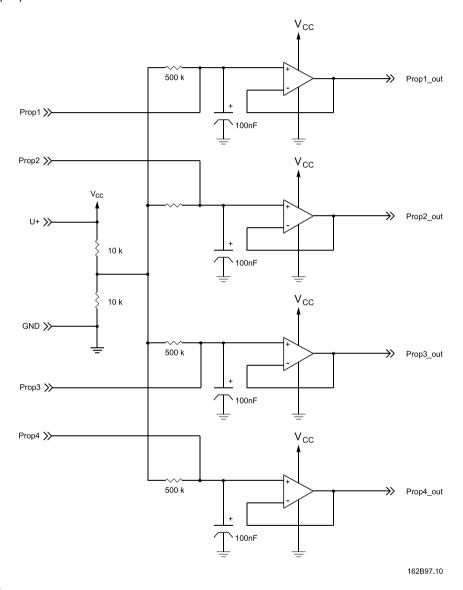

Note: There are no electronics built in to the Basic level module



## SAUER Joystick Prof 1, PVRE as Technical Information Joystick Prof 1, PVRE and PVRET

Prof 1

## **Standard Programme**

The joystick variants offer a wide range of different combination possibilities. This may result in several code numbers with identical functions (such as location of push button and choice of color).

Based on experience we have therefore put together a standard program. The standard programme of joysticks is available in the following variants:

- 4-way mechanical
- Yellow push buttons with flat collar
- Red color bands
- Standard electronics (excl. basic and extended with flow and dead band compensation).

No. of prop	No. of ON/OFF	Code numbers Left hand			Code numbers Right hand
2	0	162F1116			162F1100
2	1	162F1117	O		162F1101
2	2	162F1118	8	8	162F1102
2	3	162F1119	3	89	162F1103
2	4	162F1120	88	88	162F1104
2	5	162F1121	88	88	162F1105
2	6	162F1122	8	8	162F1106
3	0	162F1134	U	U	162F1132
3	1	162F1135	9	U	162F1133
3	2	162F1123	89	8	162F1107
3	3	162F1124	8	₿	162F1108
3	4	162F1125	8	8	162F1109
3	2	162F1126		ë	162F1110
3	3	162F1127	9	8	162F1111
3	4	162F1128	8	8	162F1112
4	0	162F1129	9	<b>U</b>	162F1113
4	1	162F1130	U	<b>P</b>	162F1114
4	2	162F1131	U		162F1115



### **Selection Overview**

## 3. Top functions

		Position 3A, 3B, 4A, 4B, 5, 6, 7	Position 3, 4
Code no. 162l	3	Push button	Proportional roller
Color	Black	3000	3100
	Red	3002	-
	Yellow	3004	-
	Grey	3008	_

## 1. Grip

Code no. 162B		••	Description
Black	Grey		
1050	1000	Right hand	Without On/Off push button in the side
	1001	Right hand	With On/Off push button in the side (Push 5)
	1004	Right hand	With dead mans button (Push 7)
	1005	Right hand	With On/Off push button in the side (Push 5) and dead mans button (Push 7)
1150	1100	Left hand	Without On/Off push button in the side
	1101	Left hand	With On/Off push button in the side (Push 5)
	1104	Left hand	With dead mans button (Push 7)
	1105	Left hand	With On/Off push button in the side (Push 5) and dead mans button (Push 7)


## 4. Color band

Code no. 162B	Color
4002	Red
4003	Yellow
4000	Black

# 

## 6. Cable

Code no. 162B	Length [mm]	Plug type	Note
6013	4000	Leads	Vertical
6014	4000	Leads	Horizontal
6015	500	Clipper	-
6016	230	TrimTrio	-
6017	230	Tabs	PVRE compatibility

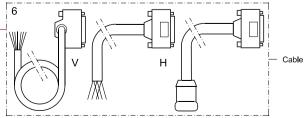

162B93.10 .10

162B92.10

Topfunction

Front plate

Grip


Colour band 162B91.10.10

Main functionsmodule with electronic variants.

## Joystick Prof 1, PVRE and PVRET Prof 1

#### **Selection Overview**

## 2. Front plates

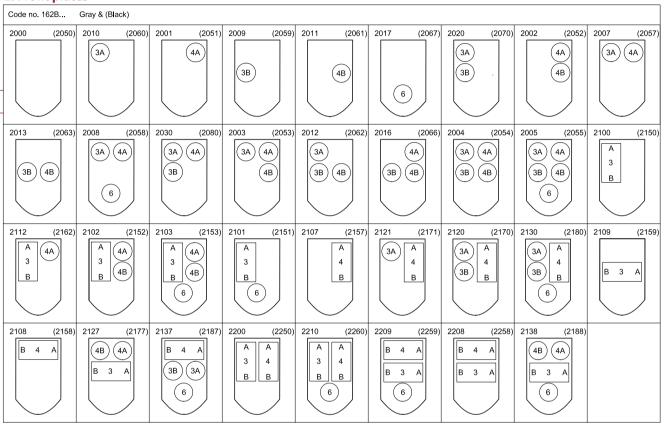

#### 162B56.11

## 5. Electronics

Code no. 162B	Туре	Description
5000	Basic	2 - 4 proportional functions, 0 - 7 ON / OFF functions
5002	Standard	2 - 4 proportional functions with direction switch and neutral switch 0 - 7 ON / OFF functions
5004	Extended	2 - 4 proportional functions with direction switch and neutral switch Electronic flow adjustment and dead band compensation on one or more prop functions 0 - 7 ON / OFF functions
5100	CAN enabled	See CAN Tech-Note



## Joystick Prof 1, PVRE and PVRET **Prof Joysticks**

**Standard Programme Details** 

This table shows a breakdown of contents of the standard programme joysticks.

Code numbers	Front plate	Grip code	Electronic
162F1100	162B2000	162B1000	162B5002
12F1101	162B2010	162B1000	162B5002
12F1102	162B2020	162B1000	162B5002
162F1103	162B2030	162B1000	162B5002
162F1104	162B2004	162B1000	162B5002
162F1105	162B2005	162B1000	162B5002
162F1106	162B2005	162B1001	162B5002
162F1107	162B2102	162B1000	162B5002
162F1108	162B2103	162B1000	162B5002
162F1109	162B2103	162B1001	162B5002
162F1110	162B2127	162B1000	162B5002
162F1111	162B2127	162B1001	162B5002
162F1112	162B2137	162B1001	162B5002
162F1113	162B2200	162B1000	162B5002
162F1114	162B2200	162B1001	162B5002
162F1115	162B2210	162B1001	162B5002
162F1116	162B2000	162B1100	162B5002
162F1117	162B2001	162B1100	162B5002
162F1118	162B2002	162B1100	162B5002
162F1119	162B2003	162B1100	162B5002
162F1120	162B2004	162B1100	162B5002
162F1121	162B2005	162B1100	162B5002
162F1122	162B2005	162B1101	162B5002
162F1123	162B2120	162B1100	162B5002
162F1124	162B2130	162B1100	162B5002
162F1125	162B2130	162B1101	162B5002
162F1126	162B2127	162B1100	162B5002
162F1127	162B2127	162B1101	162B5002
162F1128	162B2137	162B1101	162B5002
162F1129	162B2200	162B1100	162B5002
162F1130	162B2200	162B1101	162B5002
162F1131	162B2210	162B1101	162B5002
162F1132	162B2100	162B1000	162B5002
162F1133	162B2112	162B1000	162B5002
162F1134	162B2107	162B1100	162B5002
162F1135	162B2121	162B1100	162B5002

## **Prof 1 Joystick Specification**

## **Prof 1 Joystick Specification**

		Customer specification
Code no:		
Customer:		
Application:		
Subsidiary/Dealer:		
1. Grip		
2. Front plate		
3. Top functions	Position	Position
	(push button colour)	(roller)
	3A:	- 3:
	3B:	- 3. 
	4A:	4:
	4B:	- <del>4</del> .
	5:	
	6:	
	7: <sup>1)</sup>	
4. Colour band		
5. Main function module	Se	t-up
	Inverted <sup>2)</sup>	Flow reduction and
	(✓ = inverted)	dead-band compensation 3)
	(* = inverted)	(✓ = ON)
	Prop. 1 🔲	Prop. 1 🔲
	Prop. 2	Prop. 2
	Prop. 3	Prop. 3
	Prop. 4 □	Prop. 4 □
6. Cable		•
Compiled by:	Checked by:	
Date:	Date:	

- 1) Only for deadman button
- 2) Only for standard and extended level options. Factory setting is "non-inverted" if nothing else is mentioned
- 3) Only for extended level option. Factory setting is "on" if nothing else is mentioned.



## Joystick Prof 1, PVRE and PVRET Joystick Prof 1, PVRE as Technical Information

**PVRE Series 2** 

#### **PVRE Series 2**

The PVRE series 2 is the successor to the popular PVRE joystick. This joystick builds on the known technology from the Prof family of joysticks as well as the well known handles from the PVRE series 1 joysticks.

#### **Versions**

The PVRE handle is available in three different variants: No top function, with prop 3, and with two On/Off functions (rocker switches).

Code no. 162F	1310 (1300)	1311 (1301)	1312 (1302)	1313 (1303)	1314 (1304)
Symbol	155B60.10	155B62.10	155B64.10	155B63.10	155B147.10
Prop1	X	Х	Х	Х	Х
Prop 2	Х	Х	-	-	Х
Prop 3	-	-	-	-	Х
On/Off	Х	-	Х	-	-


() Incl. PVRE series 1 adapter ring for mounting in place of a PVRE Series 1




**PVRE Series 2** 

**Location and Orientation of Functions** 

It is possible to turn the PVRE handle through 180° to make the direction of movement fit the application.

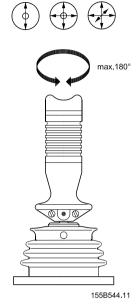


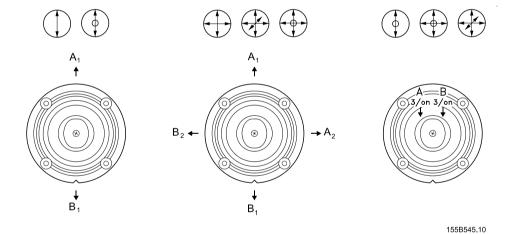




**PVRE Series 2** 

### **Connections**

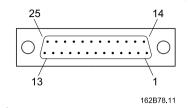

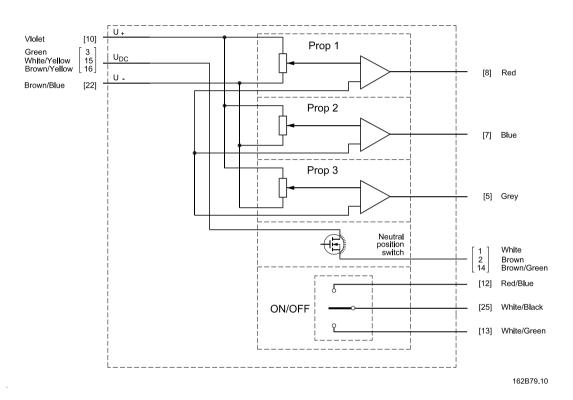

Numbers in [] indicate pin number in sub-D connector.



PVRE Series 2


## **Technical Data**


Enclosure		Below flange	IP	21	
		Above flange	IP 65		
		With On/Off	IP 42		
		With Prop 3	IP 65		
Ambient temperature			-30 - +60° [-	-22 - +140°F]	
Complement		U <sub>DC</sub>	10-	10-30 V	
Supply voltages		Max ripple	5	i%	
Current consumption			≈15	0 mA	
Cincol code as	Us	Min → Max	0.25 -	0.25 → 0.75	
Signal voltage		Neutral position	0.	.50	
Signal load in neutral position		Load type	PVE	Other	
		Load impedance	>6 kΩ	>15 kΩ	
			$\frac{U_s - 0.5 \times U_{DC}}{6  k\Omega}$	U <sub>s</sub> 15 kΩ	
Signal current at max movement		@ U <sub>DC</sub> = 12 V	±0.6 mA	$0.2 \rightarrow 0.6 \text{ mA}$	
		@ U <sub>DC</sub> = 24 V	±1.2 mA	$0.4 \rightarrow 1.2 \text{ mA}$	
Signal surrent in noutral position		@ U <sub>DC</sub> = 12 V	±0 mA	0.4 mA	
Signal current in neutral position		@ U <sub>DC</sub> = 24 V	±0 mA	0.8 mA	
On/Off switch		Max load	0.	6 A	
Neutral position switch		Max load	3 A		



PVRE Series 2


## **Dimensions**

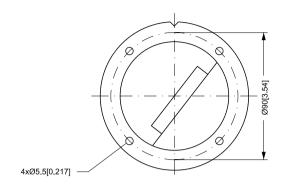

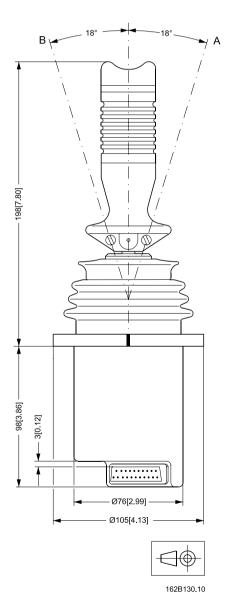



**PVRE Series 2** 

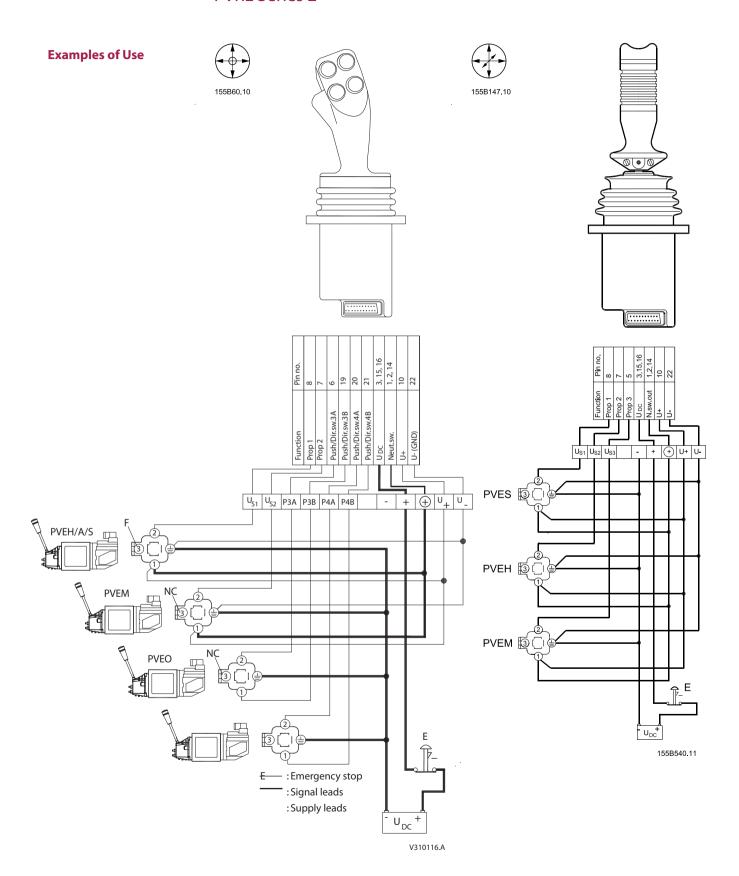



**PVRET Series 2** 

#### **PVRET Series 2**


The PVRET series 2 is the successor to the popular PVRET joystick. This joystick builds on the known technology from the Prof family of joystick as well as the traditional handles from the PVRET series 1.

#### Version

Code no.	1315
162F	(1305)
Symbol	155B532.11

() Incl. PVRE series 1 adapter ring

#### **Connections**

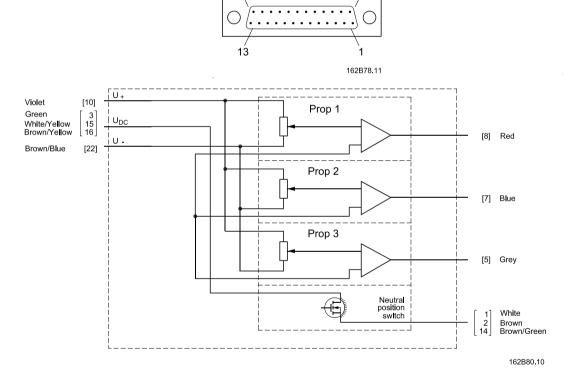

Numbers in [] indicate pin number in sub-D connector.




# Joystick Prof 1, PVRE and PVRET

## **PVRET Series 2**

## **Technical Data**

Enclosure		Below flange	IP 21		
		Above flange	ange IP 54		
Ambient temperature			-30 - +60° [-22 - +140°F]		
Complement		U <sub>DC</sub>	10-30 V		
Supply voltages		Max ripple	5%		
Current consumption			≈150 mA		
Signal voltage	$\frac{U_s}{U_{DC}}$	$Min \rightarrow Max$	0.25 → 0.75		
		Neutral position	0.50		
Signal load in neutral position		Load type	PVE	Other	
		Load impedance	>6 kΩ	>15 kΩ	
			$\frac{U_s - 0.5 \times U_{DC}}{6 \; k\Omega}$	$\frac{U_s}{15k\Omega}$	
Signal current at max movement		@ U <sub>DC</sub> = 12 V	±0.6 mA	0.2 → 0.6 mA	
		@ U <sub>DC</sub> = 24 V	±1.2 mA	0.4 → 1.2 mA	
C:		@ U <sub>DC</sub> = 12 V	±0 mA	0.4 mA	
Signal current in neutral position		@ U <sub>DC</sub> = 24 V	±0 mA	0.8 mA	
On/Off switch		Max load	0.6 A		
Neutral position switch		Max load	3 A		


## **Dimensions**

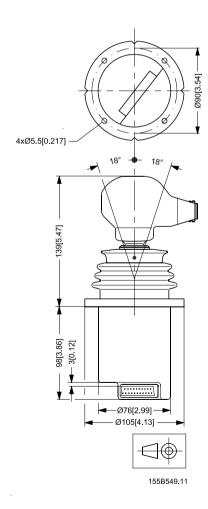



**PVRET Series 2** 

## **Examples of Use**

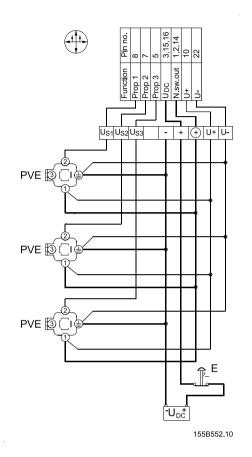

E---: Emergency stop
---: Signal leads

:Supply leads

Notes

**Notes** 

Notes



#### **Our Products**

Open circuit axial piston pumps

Gear pumps and motors

Fan drive systems

Closed circuit axial piston pumps and motors

Bent axis motors

Hydrostatic transmissions

Transit mixer drives

Hydrostatic transaxles

Electrohydraulics

Integrated systems

Microcontrollers and software

PLUS+1™ GUIDE

**Displays** 

Joysticks and control handles

Sensors

Orbital motors

Inverters

Electrohydraulic power steering

Hydraulic power steering

Hydraulic integrated circuits (HIC)

Cartridge valves

Directional spool valves

**Proportional valves** 

## **Sauer-Danfoss Mobile Power and Control Systems** - Market Leaders Worldwide

Sauer-Danfoss is a comprehensive supplier providing complete systems to the global mobile market.

Sauer-Danfoss serves markets such as agriculture, construction, road building, material handling, municipal, forestry, turf care, and many others.

We offer our customers optimum solutions for their needs and develop new products and systems in close cooperation and partnership with them.

Sauer-Danfoss specializes in integrating a full range of system components to provide vehicle designers with the most advanced total system design.

Sauer-Danfoss provides comprehensive worldwide service for its products through an extensive network of Global Service Partners strategically located in all parts of the world.

Local address:			

Sauer-Danfoss (US) Company Sauer-Danfoss ApS 2800 East 13th Street DK-6430 Nordborg, Denmark Ames, IA 50010, USA Phone: +45 7488 4444 Phone: +1 515 239-6000 +45 7488 4400

Sauer-Danfoss-Daikin LTD.

Shin-Osaka TERASAKI 3rd Bldg. 6F

1-5-28 Nishimiyahara, Yodogawa-ku

+1 515 239 6618 Sauer-Danfoss GmbH & Co. OHG

Postfach 2460, D-24531 Neumünster Krokamp 35, D-24539 Neumünster, Germany Osaka 532-0004, Japan

Phone: +49 4321 871-0 Phone: +81 6 6395 6066 +81 6 6395 8585 +49 4321 871 122 Fax: