

- > **Connection:**
6 mm, 1/4" Push In Fitting
- > **Accessible Manual Override**
- > **Wide range of operating pressure**
- > **Normally open/**
Normally closed option



Technical features

Medium:

Compressed air
(Lubricated or non Lubricated)

Max. pressure:

20 bar (290 psi)

Recommended

Operating pressure:

0,7 ... 17 bar (10 ... 247 psi)

Port size:

6 mm, 1/4" PIF

Drain Operation (Normally open):

Pressure to close drain:

> 0,3 bar (4,35 psi)

Pressure to open drain:

< 0,2 bar (2,9 psi)

Minimum air flow to close drain:

0,6 dm³/s

Drain Operation (Normally closed):

Pressure to open drain:

> 1 bar (14,5 psi)

Pressure to close drain:

0 bar (0 psi)

Minimum air flow to open drain:

0 dm³/s

Ambient/Media temperature:

+1,5 ... +80°C (+35 ... +176°F)

Material:

Main Body, Manual Override,
Bonnet, Piston, Retaining Ring:
Acetal

Lever: Glass filled acetal

Float: Orgalloy RS6000

Gaskets: Silicon free nitrile rubber

Valve Body:

Glass filled polypropylene

Valve Seat: Acetal

Spring, Filter Screen: Stainless steel

PIF Collet: Nickel plated brass


IMI Precision Engineering recommend using IMI Precision Engineering specified tube tolerances and minimum bend radius where the condensate is piped away. This helps avoid blockage of the downstream system. Also the sealing gasket must be correctly assembled onto the autodrain unit before attaching to the bowl.

Technical data

Symbol	Port size	Function	Model
	6 mm	Normally open	6000-50
	1/4"	Normally open	6000-51
	6 mm	Normally closed	6000-52

Dimensions

Dimensions in mm
Projection/First angle

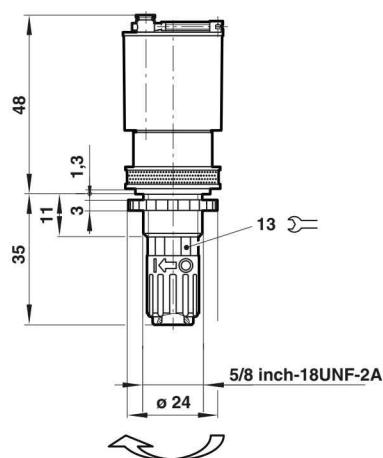

Warning

These products are intended for use in industrial compressed air systems only. Do not use these products where pressures and temperatures can exceed those listed under **»Technical features/data«**.

Before using these products with fluids other than those specified, for non-industrial applications, life-support systems or other applications not within published specifications, consult
IMI Precision Engineering, IMI International s.r.o.

Through misuse, age, or malfunction, components used in fluid power systems can fail in various modes. The system designer is warned to consider the failure modes of all component parts used in fluid power systems and to provide adequate safeguards to prevent personal injury or damage to equipment in the event of such failure.

System designers must provide a warning to end users in the system instructional manual if protection against a failure mode cannot be adequately provided.

System designers and end users are cautioned to review specific warnings found in instruction sheets packed and shipped with these products.